

2007 Toyota FJ Cruiser maintenance schedule

Miles (1000)	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	105	110	115	120	
Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	126	132	138	144	
Replace engine oil and oil filter	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Rotate tires	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Check brake linings/drums and brake pads/discs	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
Lubricate propeller shaft (4WD models)	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o
Re-torque propeller shaft bolt	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o
Tighten nuts and bolts on chassis	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o
Replace automatic transmission fluid												o													o
Replace cabin air filter						x						x						x							x
Replace engine air filter						x						x						x							x
Replace front differential oil (4WD models)			o			o			o			o			o			o			o				o
Replace manual transmission oil (4WD models)						o						o						o							o
Replace rear differential oil			o			o			o			o			o			o			o				o
Replace spark plugs						x						x						x							x
Replace transfer case oil (4WD models)						o						o						o							o
Replace engine coolant (every 50k)																				x					
Check automatic transmission fluid						x						x						x							x
Check ball joints and dust covers	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o
Check brake lines and hoses	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o
Check brake pads/discs	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o
Check differential oil	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o
Check drive belts												x			x			x			x			x	
Check drive shaft boots (4WD only)	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o
Check engine air filter	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o
Check engine coolant			x			x			x			x			x			x			x			x	
Check engine valve clearance												x													x
Check exhaust pipes and mountings			x			x			x			x			x			x			x			x	
Check fuel lines, tank band, vapor vent system						x						x						x							x
Check fuel tank cap gasket						x						x						x							x
Check radiator and condenser			x			x			x			x			x			x			x			x	
Check steering gear box			x			x			x			x			x			x			x			x	
Check steering linkage and boots	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o	o	x	o
Check transfer case oil (4WD models)	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o
Check transmission fluid or oil	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o	o

x - required maintenance

o - recommended maintenance under special conditions (towing, offroad)