



# FRONT AXLE HUB COMPONENTS

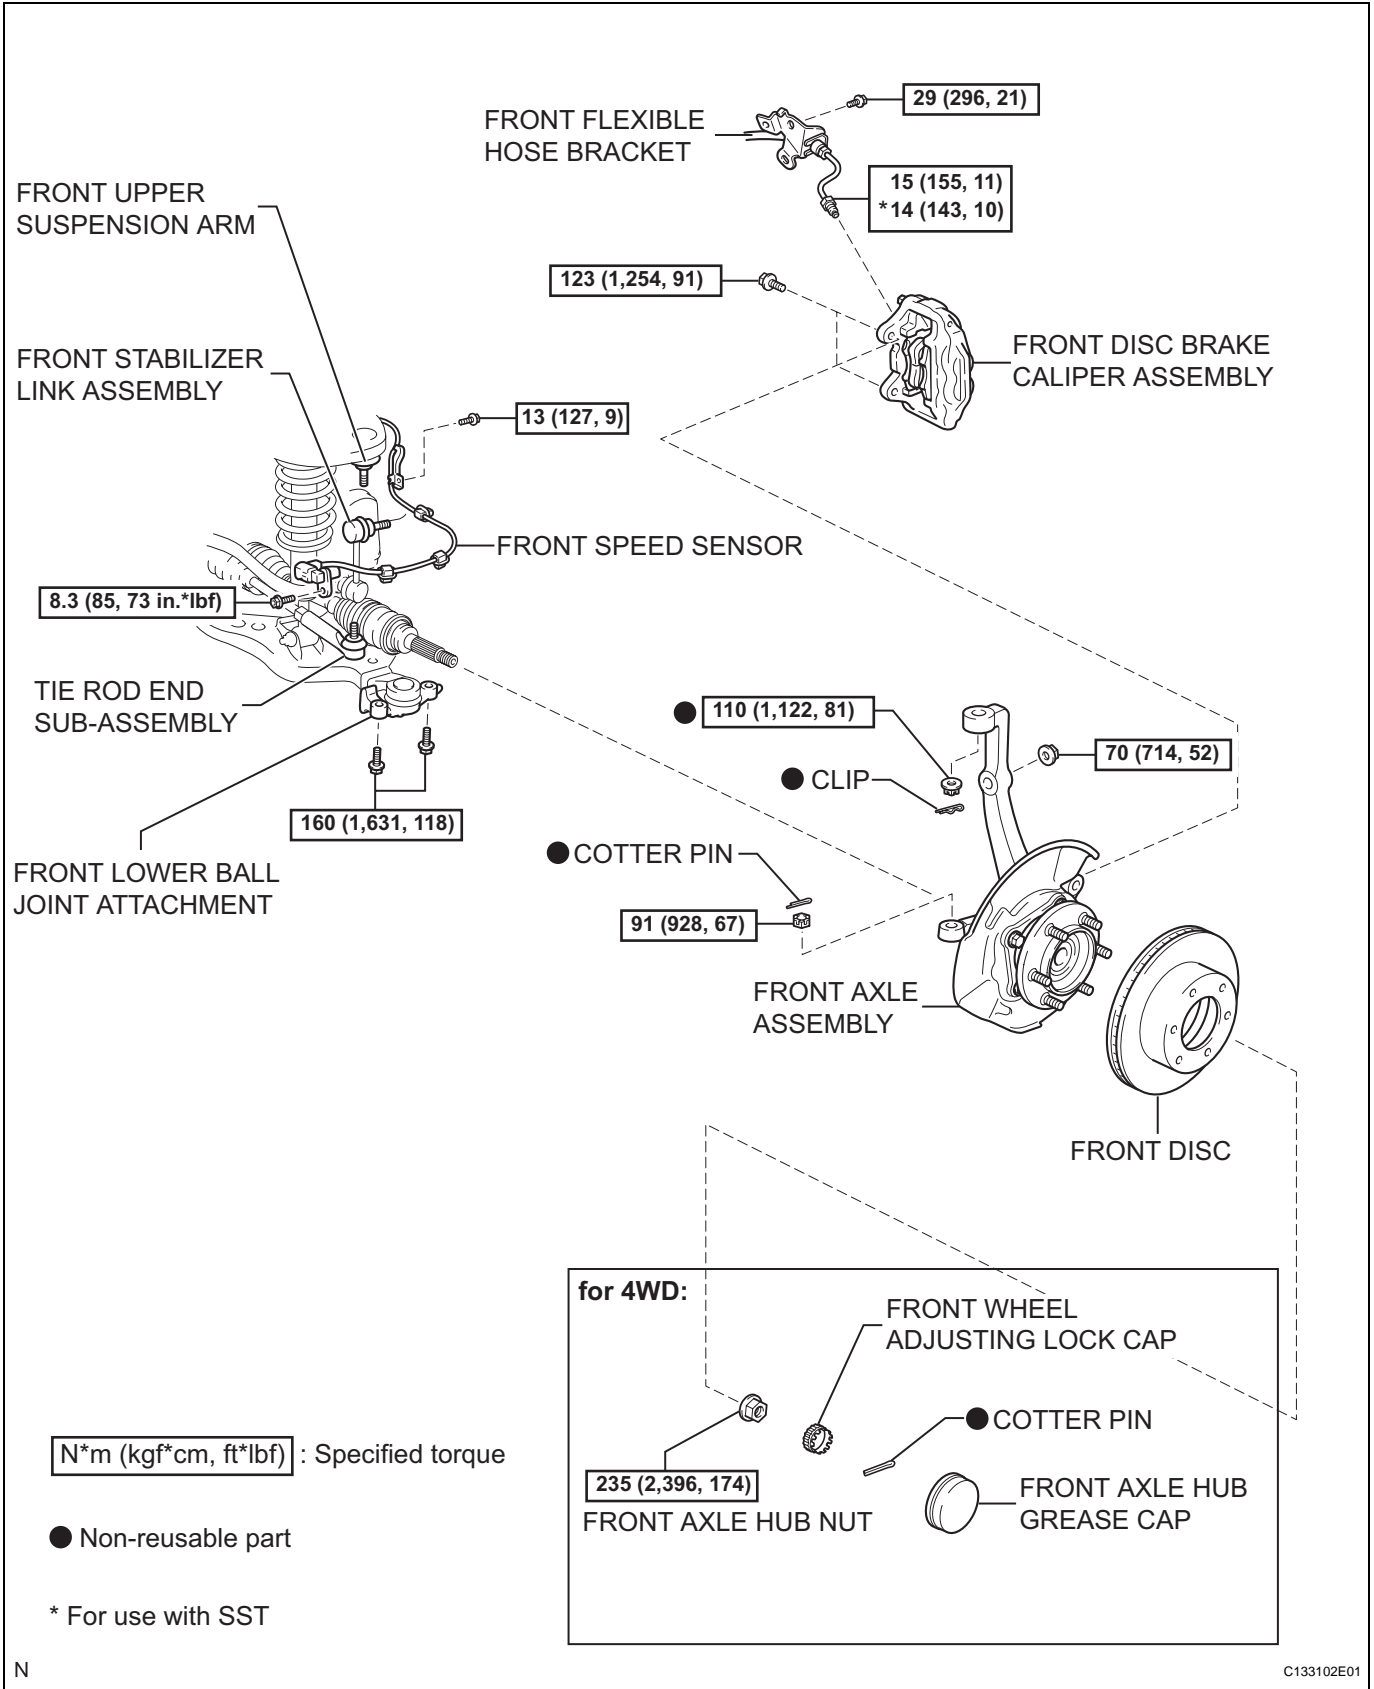


for 2WD:





● KNUCKLE GREASE RETAINER CAP


for 4WD:



● STEERING KNUCKLE OIL SEAL

 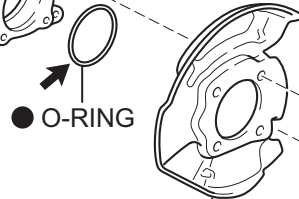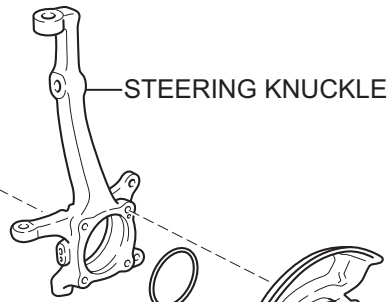


for 2WD:




● 275 (2,804, 203)  
FRONT WHEEL ADJUSTING NUT

● FRONT AXLE WITH ABS ROTOR BEARING ASSEMBLY

 


80 (816, 59)

80 (816, 59)



● FRONT AXLE HUB OIL SEAL



FRONT AXLE HUB

**N\*m (kgf\*cm, ft\*lbf)** : Specified torque

● Non-reusable part

← MP grease