



FRONT DRIVE SHAFT (for 4WD)

COMPONENTS

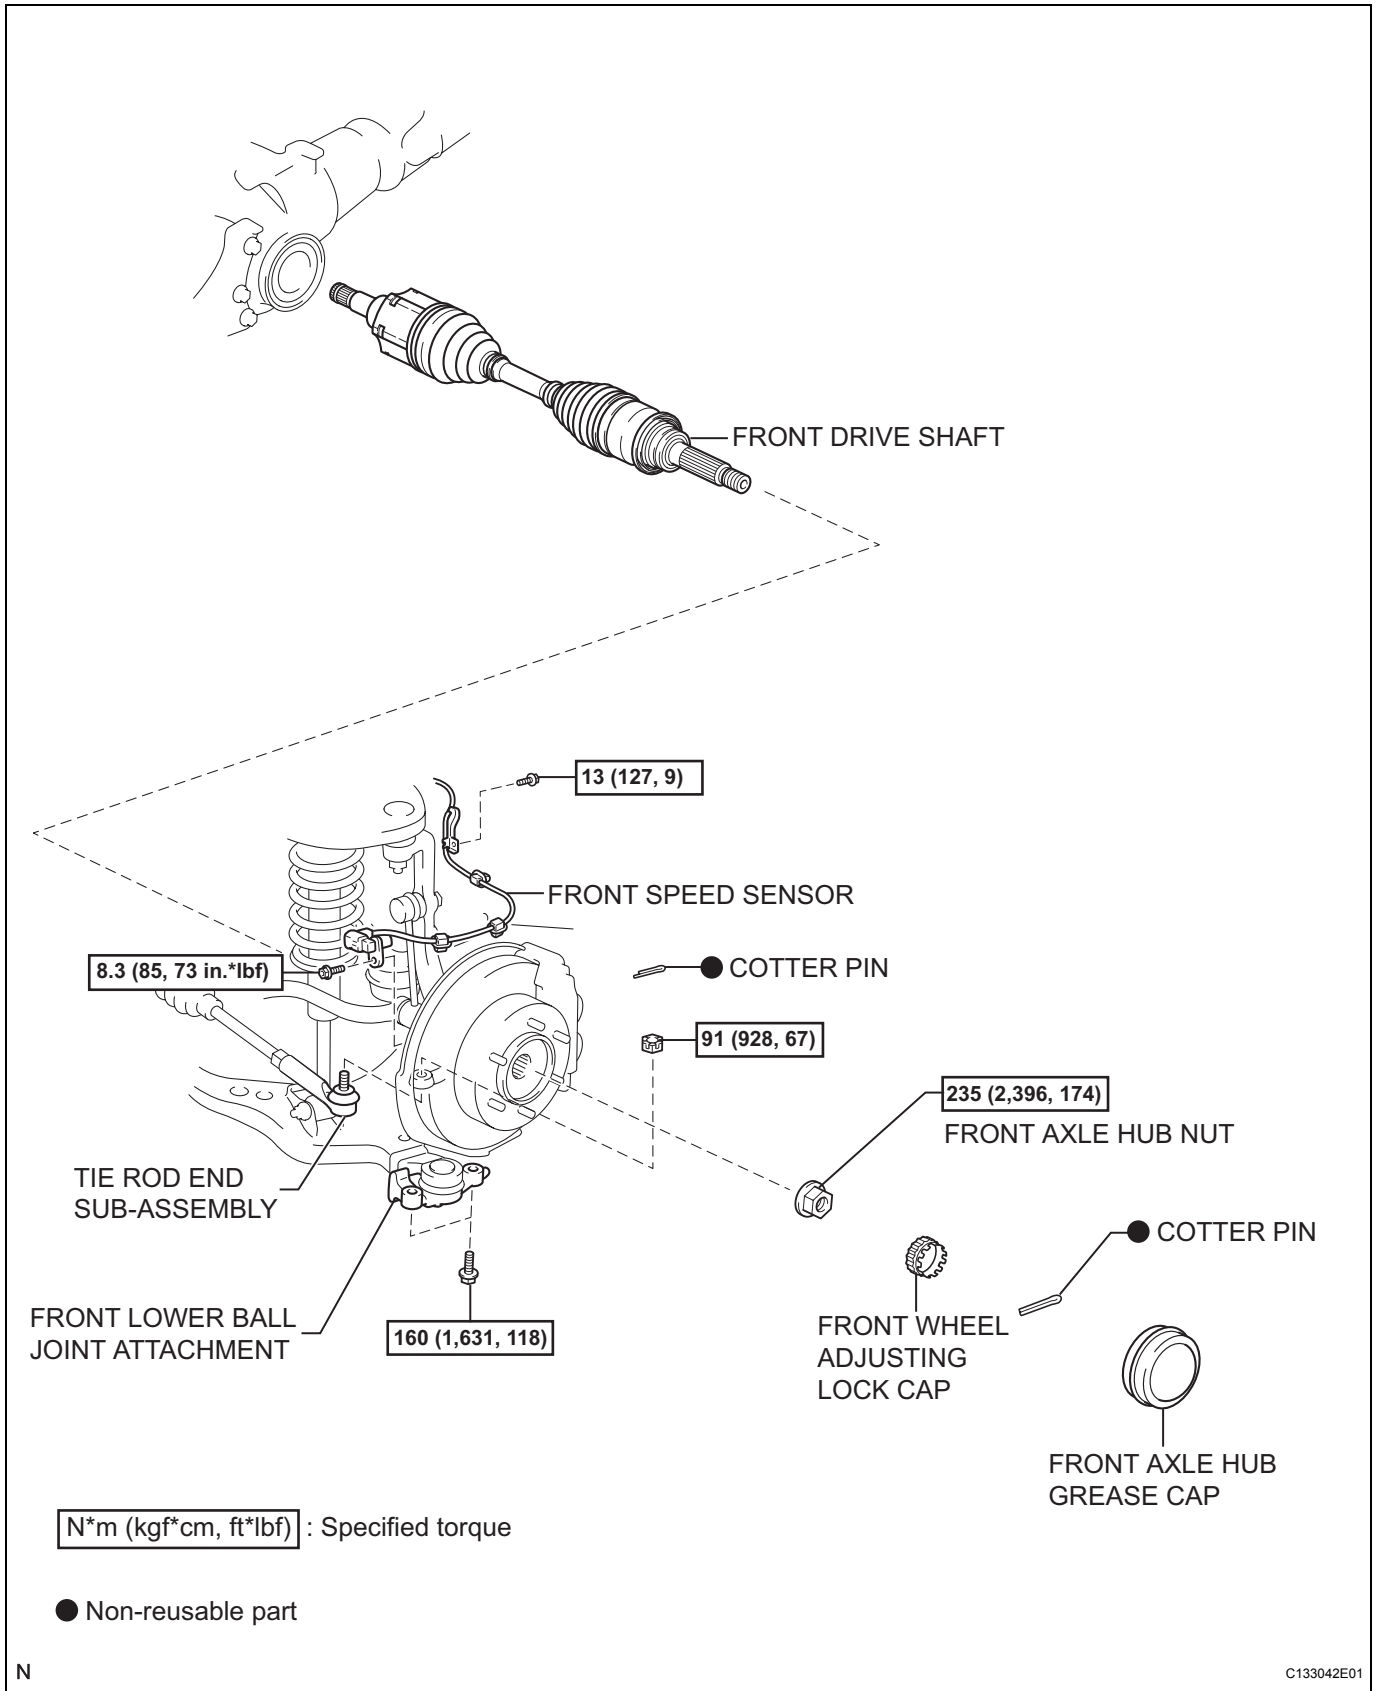


DS

 ● FRONT DRIVE SHAFT HOLE SNAP RING



● FRONT DRIVE SHAFT DUST COVER

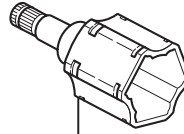

FRONT DRIVE INBOARD JOINT ASSEMBLY

● FRONT DRIVE INNER SHAFT SNAP RING



● FRONT AXLE INBOARD JOINT BOOT NO. 2 CLAMP



● INBOARD JOINT BOOT




● FRONT AXLE INBOARD JOINT BOOT CLAMP



● FRONT AXLE OUTBOARD JOINT BOOT CLAMP



● OUTBOARD JOINT BOOT

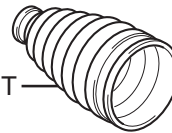

● FRONT AXLE OUTBOARD JOINT BOOT NO. 2 CLAMP




Supply Part:



● FRONT AXLE OUTBOARD JOINT BOOT NO. 2 CLAMP

FRONT DRIVE OUTBOARD JOINT SHAFT ASSEMBLY

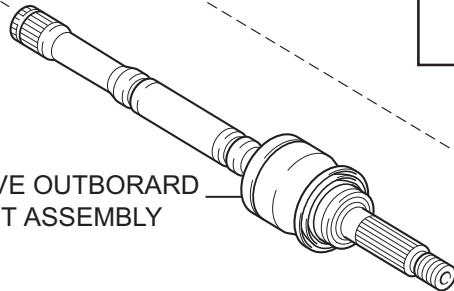

● Non-reusable part

DS